


## Assembly Instructions

1. Insert crosslink tabs into laptop stand holes as shown.

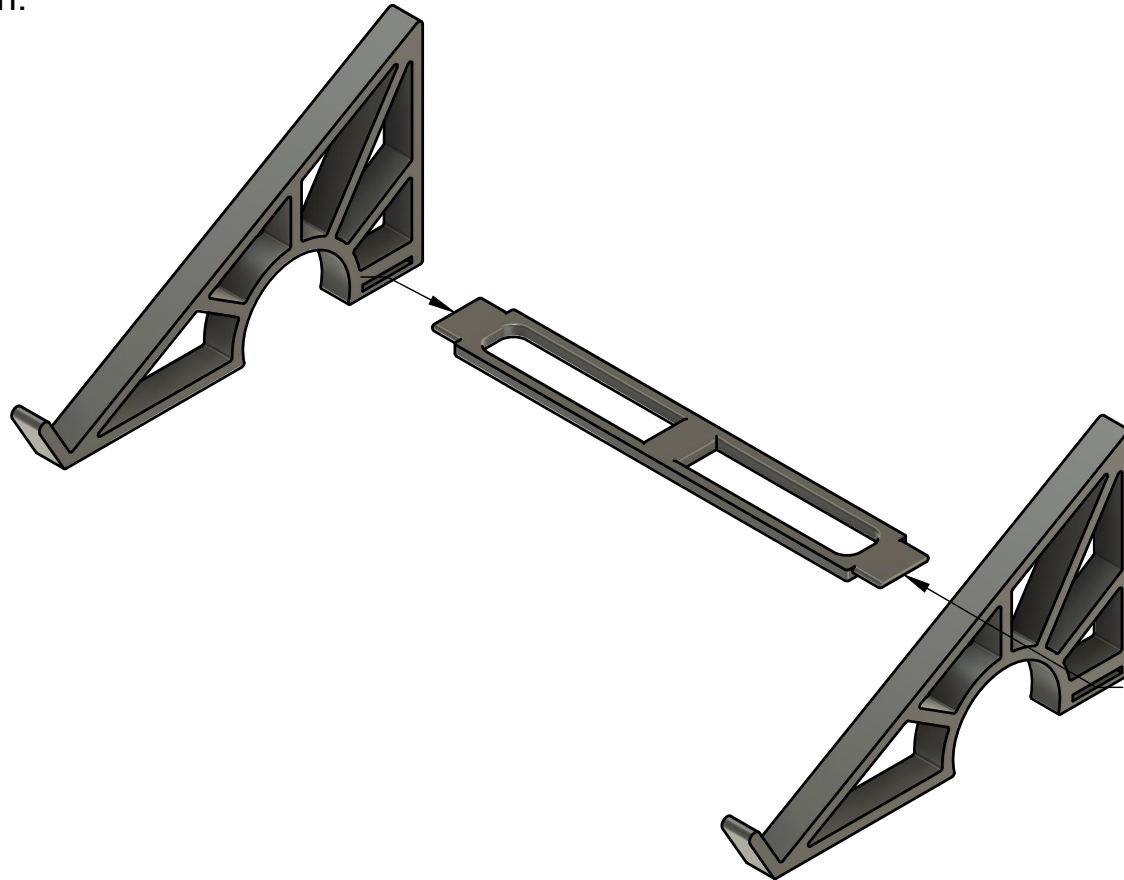

Dept. BHD Printing	Units N/A	Created by JP	16-JAN-2021	Approved by JM	04-JAN-2021
<b>BHD</b> MANUFACTURING		Document type Assembly Instructions	Document status Issued for Information		
		Title BHD Laptop Stand 14"	DWG No. BPG-AI-0001-01		
		Rev. 1	Date of issue 16-JAN-2021	Sheet 1/1	